



POST-HEATING AND ADDITIONAL HEATING RESISTOR

Installation instructions | Installationsanweisungen

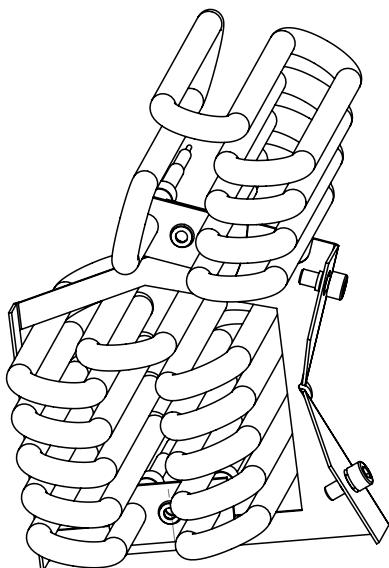

Post-heating and additional heating resistor package
Nachheizregister- und optionales Heizregisterset

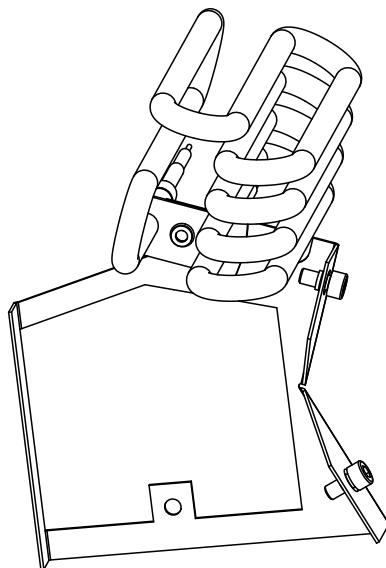

Post-heating resistor package
Nachheizregisterset






INSTALLING A POST-HEATING RESISTOR IN THE UNIT

1. Disconnect the ventilation unit from the mains electricity supply.
2. Lift off the filter door cover panel (A) and unscrew the four door screws.
3. Lift the door off.

CAUTION

The door is heavy.

4. In model L, the supply air fan connectors (B) must be removed from the side wall to make installation easier.
5. Remove the cover plugs (C) from the intermediate wall.
6. Install the resistor package over the supply air fan as shown in the image and fasten it with screws to the holes in the intermediate wall.
7. Remove the extract air filter (E) from the unit. Feed the resistor cords with their connectors via the through-hole (D) to the other side of the intermediate wall. Fasten the rubber feed through in place to the intermediate wall. Attach the connector (F) to the matching part in the electrical box as shown in the image.
8. If preferred, the cell bypass can be selected as the defrosting method from the control panel (see the control panel manual).

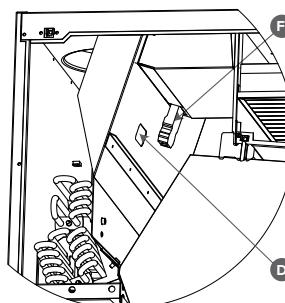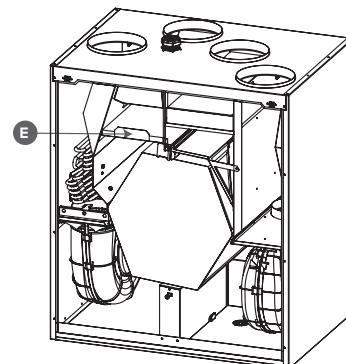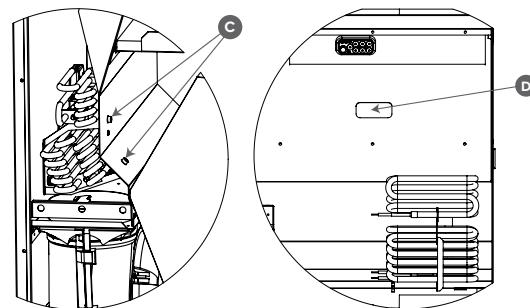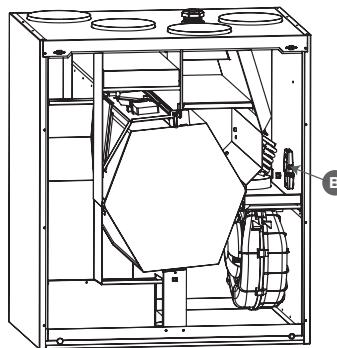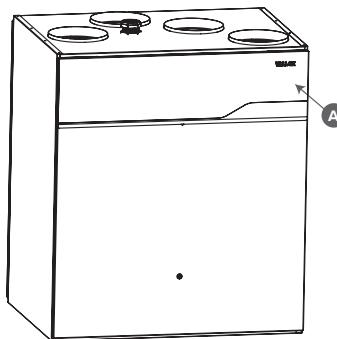

PRODUCT NUMBERS

ValloPlus 370 MV	Vallox product number
Post-heating resistor package, 900 W	3688-001
Post-heating and additional heating resistor package, 900 + 1500 W	3690-001



WARNING

A danger of electric shock or fire! We strongly recommend that the installation be done by a qualified expert. Check local regulations before installation.

INSTALLATION

EINBAU EINES NACHHEIZREGISTERS IM GERÄT






- Ziehen Sie den Netzstecker des Lüftungsgeräts aus der Steckdose.
- Heben Sie die Abdeckplatte der Filtertür (A) ab und lösen Sie die vier Türschrauben.
- Heben Sie die Tür heraus.



VORSICHT

Die Tür ist schwer.

- Bei Modell L müssen die Anschlüsse der Zuluftventilatoren (B) von der Seitenwand getrennt werden, um die Installation zu erleichtern.
- Nehmen Sie die Abdeckkappen (C) von der Zwischenwand ab.
- Montieren Sie das Registerset wie in der Abbildung gezeigt über dem Zuluftventilator und schrauben es an den Löchern der Zwischenwand fest.
- Nehmen Sie den Abluftfilter (E) aus dem Gerät. Führen Sie Anschlusskabel mit ihren Stecker durch die Durchführung (D) auf die andere Seite der Zwischenwand. Bringen Sie die Gummi-Kabeldurchführung an der Zwischenwand an. Verbinden Sie den Stecker (F) wie abgebildet mit dem entsprechenden Anschluss im Schaltkasten.
- Bei Bedarf können Sie als Abtaumethode „Wärmetauscher-Bypass“ auf dem Bedienelement auswählen (siehe Anleitung des Bedienelements).

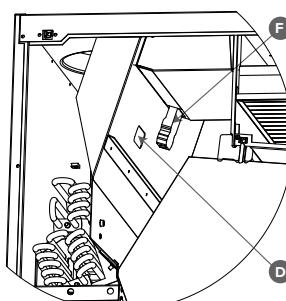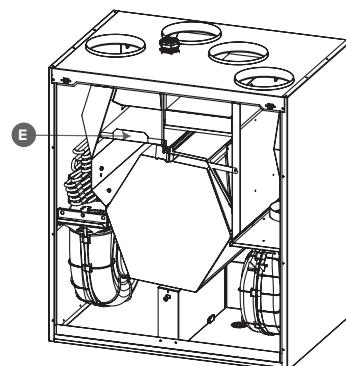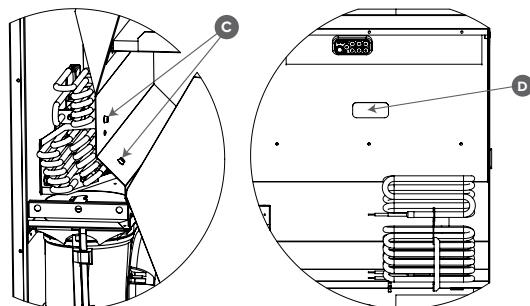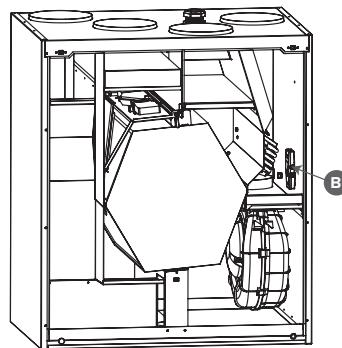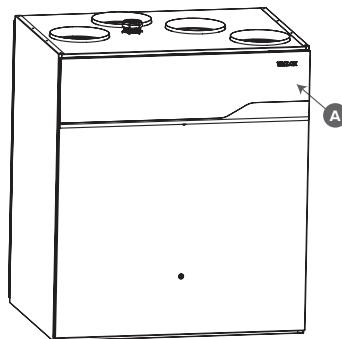

ARTIKELNUMMERN

ValloxPlus 370 MV	Vallox Artikelnummern
Nachheizregisterset, 900 W	3688
Nachheizregister- und optionales Heizregisterset, 900 + 1500 W	3690



WARNUNG

Stromschlag- und Brandgefahr!
Wir empfehlen dringend,
die Installation von einem
Fachmann ausführen zu lassen.
Prüfen Sie vor der Installation
die örtlichen Vorschriften.

VALLOX

www.vallox.de

Vallox GmbH | Von-Eichendorff-Straße 59 a | 86911 Dießen
info@vallox.de

www.vallox.com

Vallox Oy | Myllykyläntie 9-11 | 32200 LOIMAA | FINNLAND